



RECOMMENDED PROCEDURE FOR CUTTING OPENINGS IN CORESLAB PLANK

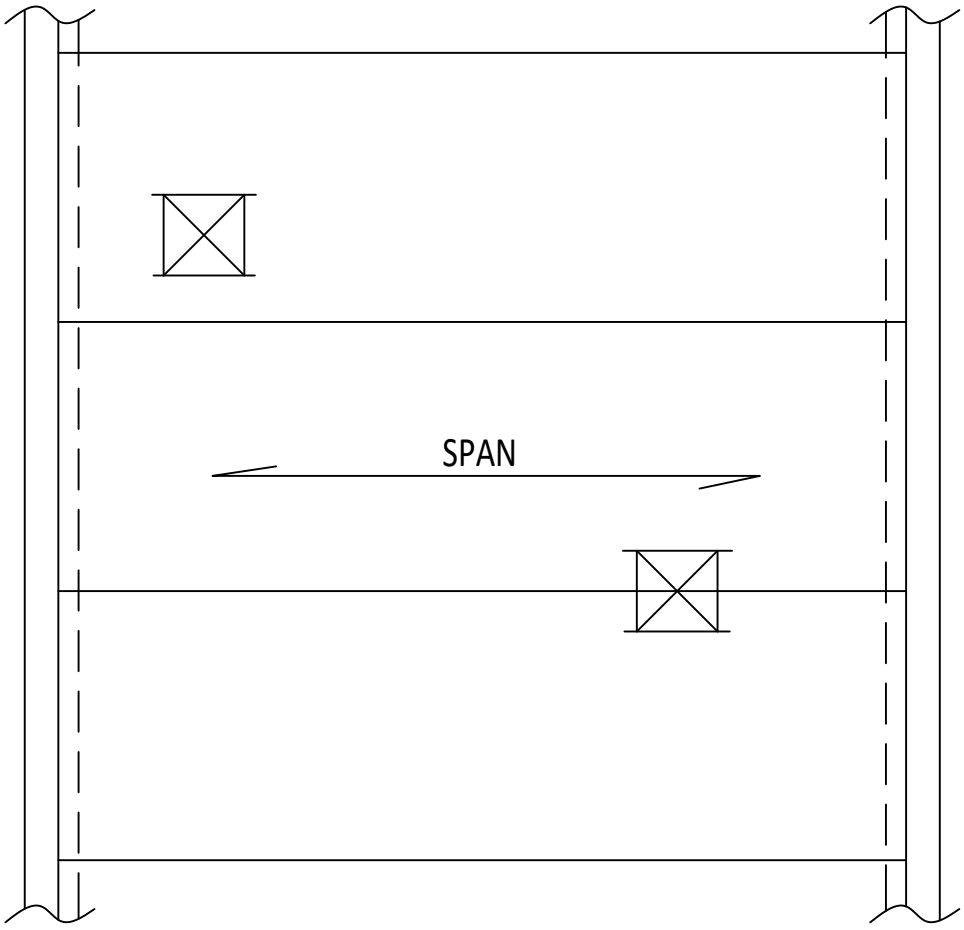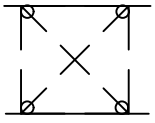


PLAN

STEP #1  Field cut holes, other than those shown on plans, must be approved by Coreslab Engineering Dept.

STEP #2  Drill a pilot hole thru slab at each corner of proposed opening.

STEP #3  Saw cut opening edges running parallel with prestressing strands.

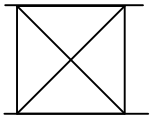STEP #4  Sawcut opening edges running perpendicular to prestressing strands. Do not cut beyond pilot holes.